

MAGELLAN™

K32LCD - User Quick Reference Guide

The LCD will guide you with detailed messages.

Use the arrow keys to scroll the menu or options.

AC Light




ON = Power on
OFF = Power off

StayD Light

ON = StayD on
OFF = StayD off



Keys

-  = Press once + **[MASTER CODE]** for Quick Menu programming
-  = Press & hold for keypad settings
-  = Press & hold for chime programming

How to Arm (when StayD is OFF) †

To Arm When Leaving...



To Regular Arm:

1. Close all zones in the desired partition.
2. Press **[ARM]**.
3. Enter your **[ACCESS CODE]**.

To Arm When Staying...



To Stay Arm:

1. Press the **[STAY]** key.
2. Enter your **[ACCESS CODE]***.

To Sleep Arm:

1. Press the **[SLEEP]** key.
2. Enter your **[ACCESS CODE]***.

To Disarm: **[OFF]** + **[ACCESS CODE]***

* Press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

† If StayD is ON, refer to the StayD User Card for more information.

Trouble Display

The screen will display all troubles when they occur.

1. Press the **[TBL]** key. The trouble(s) will be displayed. Scroll through the trouble list using the **[▲]** and **[▼]** keys.
2. Read the corresponding explanation of the trouble from the trouble list in the User Guide. If no repair instructions are given, call your security company for repairs.
3. Press the **[CLEAR]** key to exit.

Panic Keys

To send a silent or audible alarm to your security company, press and hold one of the key combinations listed below for two seconds.

Panic Alarm Type	Key Combinations
Police	Keys [1] and [3]
Medical	Keys [4] and [6]
Fire	Keys [7] and [9]

How to Bypass Zones

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]**.
3. Select the zone(s) you want to bypass by entering the two-digit zone number (i.e. zone 3 = 03).
4. Press the **[ENTER]** key to save and exit.

Alarm Memory Display

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The zones that were in alarm the last time the system was armed will be displayed.
4. Press the **[ENTER]** key to save and exit.

